



Návod k použití



2026-06-29

Sporák s indukčním ohřevem SPI 708 ES

www.rmgastror.com



OBSAH

1. PROHLÁŠENÍ O SHODĚ	3
2. TECHNICKÁ DATA	3
3. UMÍSTĚNÍ ELEKTRICKÉ	3
4. BEZPEČNOSTNÍ OPATŘENÍ Z HLEDISKA POŽÁRNÍ OCHRANY	3
5. INSTALACE	4
6. PŘIPOJENÍ ELEKTRICKÉHO KABELU DO SÍTĚ	4
7. SAFETY INSTRUCTIONS	4
8. SAFETY INSTRUCTIONS	5
9. RECOGNITION OF COOKWARE	7
10. CONDITION FOR INSTALLATION	8
11. PUTTING THE APPLIANCE INTO OPERATION	9
12. OPERATION TEST	10
13. OPERATION	10
14. INSTRUCTIONS FOR USE	12
15. ČIŠTĚNÍ A ÚDRŽBA	13

1. PROHLÁŠENÍ O SHODĚ

Vyhláška MZd. 38/2001 Sb. Nařízení 1907/2006/EC - REACH Regulation, 1935/2004/EC – Food contact regulation.

Výrobky splňují požadavky §26 zákona č.258/2000 v platném znění. Výrobky splňují požadavky směrnice RoHS 2015/863/EU, 10/2011, 517/2014, 2015/1094, 2015/1095.

Pozor, výrobce se vzdává jakékoli odpovědnosti v případě přímých i nepřímých poškození, které se vztahují ke špatné instalaci, nesprávným zásahem nebo úpravami, nedostatečnou údržbou, nesprávným používáním, a které jsou eventuálně způsobeny jinými příčinami, jež uvádí body uvedené v podmínkách prodeje. Tento spotřebič je určen pouze pro odborné používání a musí být obsluhován kvalifikovanými osobami. Části, které byly po nastavení zajištěny výrobcem nebo pověřeným pracovníkem, nesmí uživatel přestavovat.

2. TECHNICKÁ DATA

Šířka netto [mm]	Hloubka netto [mm]	Výška netto [mm]	Hmotnost netto [kg]	Příkon elektrický [kW]	Napájení
800	300	300	77.00	20.000	400 V / 3N - 50 Hz

3. UMÍSTĚNÍ ELEKTRICKÉ

Ke správné činnosti a umístění spotřebiče je nutné dodržet následující všechny předepsané normy pro daný trh. Rozbalte přístroj a zkontrolujte, zda se přístroj nepoškodil během přepravy. Umístěte přístroj na vodorovnou plochu (maximální nerovnost do 2°). Drobné nerovnosti lze vyrovnat regulovatelnými nožičkami. Jestliže zařízení bude umístěné tak, že bude v kontaktu se stěnami nábytku, tyto musí odolávat teplotě až 60°C. Instalaci, seřízení, uvedení do provozu musí provést kvalifikovaná osoba, která má k takovýmto úkonům oprávnění, a to dle platných norem. Přístroj může být instalován samostatně nebo v sérii s přístroji naší výroby. Je nutno dodržovat minimální vzdálenost 10 cm od hořlavých materiálů. V tomto případě je nutné zabezpečit odpovídající úpravy, aby byla zabezpečena tepelná izolace hořlavých částí. Spotřebič se musí instalovat pouze na nehořlavém povrchu nebo u nehořlavé stěny. **Součásti spotřebiče zajištěné výrobcem, nebo jeho zástupcem nesmí pracovník provádějící instalaci výrobku přestavovat.**

4. BEZPEČNOSTNÍ OPATŘENÍ Z HLEDISKA POŽÁRNÍ OCHRANY

- obsluhu spotřebiče smí provádět pouze dospělé osoby
- spotřebič smí být bezpečně používán v souladu s platnými normami daného trhu:

Ochrana proti požáru v prostorách se zvláštním rizikem nebo nebezpečím

Ochrana před účinky tepla

- spotřebič je nutné umístit tak, aby stál nebo visel pevně na nehořlavém podkladu

Na spotřebič do vzdálenosti menší než bezpečná vzdálenost od něho nesmějí být kladeny předměty hořlavých hmot (nejmenší vzdálenost spotřebiče od hořlavých hmot je 10 cm).

Tabulka: stupeň hořlavosti stavební hmoty zařazené do st. hořlavosti hmot a výrobků

Stupeň hořlavosti	Stavební hmoty
A – nehořlavé	žula, pískovec, betony, cihly, keramické obkladačky, omítky
B – nesnadno hořlavé	akumin, heraklit, lihnos, itaver
C1 – těžce hořlavé	dřevo, listnaté, překližky sirkoklit, tvrzený papír, umakart
C2 – středně hořlavé	dřevotřískové desky, solodur, korkové desky, pryž, podlahoviny
C3 – lehce hořlavé	dřevovláknité desky, polystyrén, polyuretan, PVC

- informace o stupni hořlavosti běžným stavebních hmot uvádí tabulka výše. Spotřebiče musí být instalovány bezpečným způsobem. Při instalaci musí být dále respektovány příslušné projektové, bezpečnostní a hygienické předpisy:

- požární bezpečnost lokálních spotřebičů a zdrojů tepla
- ochrana proti požáru v prostorech se zvláštním rizikem nebo nebezpečím
- ochrana před účinky tepla

5. INSTALACE

Důležité: Výrobce neposkytuje žádnou záruku na závady, vzniklé v důsledku nesprávného používání, nedodržování instrukcí obsažených v přiloženém návodu k použití a špatným zacházením se spotřebiči. Instalaci, úpravy a opravy spotřebičů pro velkokuchyně, tak jako i jejich demontáž z důvodu možného poškození přívodu plynu, mohou být prováděny pouze na základě smlouvy o údržbě, tato smlouva může být uzavřena s autorizovaným prodejcem, přičemž musí být dodržovány technické předpisy a normy a předpisy týkající se instalace, elektrického přívodu, plynové přípojky a bezpečnosti práce. Technické instrukce pro instalaci a seřízení, k použití POUZE pro specializované techniky. Instrukce, které následují, se obrací k technikovi kvalifikovanému pro instalaci, aby provedl všechny operace způsobem co nejkorektnějším a podle platných norem. Jakákoli činnost spojená s regulací apod. musí být vykonána pouze se zařízením odpojeným ze sítě. Je-li nutno udržovat spotřebič pod napětím je nutno dbát nejvyšší opatrnosti. Typ spotřebiče pro provedení odtahu je deklarován na typovém štítku, jedná se o spotřebiče typu A1.

6. PŘIPOJENÍ ELEKTRICKÉHO KABELU DO SÍTĚ

Instalace elektrického přívodu – tento přívod musí být samostatně jištěn. A to odpovídajícím jističem jmenovitého proudu v závislosti na příkonu instalovaného přístroje. Příkon přístroje zkontrolujte na výrobním štítku na zadním panelu (či boku) přístroje. Připojený zemnicí vodič musí být delší než ostatní vodiče. Přístroj připojte přímo na síť, je nezbytné vložit mezi spotřebič a síť vypínač s minimální vzdáleností 3 mm mezi jednotlivými kontakty, který odpovídá platným normám a zatížením. Přívod uzemnění (žlutozelený) nesmí tímto spínačem být přerušen. Přístroj určený pro připojení do zásuvky, připojte do sítě, pokud má zásuvka odpovídající jištění. V každém případě přívodní kabel musí být umístěn tak, že v žádném bodě nedosáhne teploty o 50 stupňů vyšší než prostředí. Než bude spotřebič připojen do sítě, je nutné se nejprve ujistit, že:

- přívodní jistič a vnitřní rozvod snesou proudové zatížení spotřebiče (viz štítek matrice)
- rozvod je vybaven účinným uzemněním podle norem příslušného trhu a podmínek daných zákonem
- zásuvka nebo vypínač v přívodu jsou dobře přístupné od spotřebiče
- elektrický přívod do zařízení musí být z ohebného materiálu

Vzdáváme se jakékoli zodpovědnosti v případě, že tyto normy nebudou respektovány a v případě porušení výše uvedených zásad. Před prvním použitím musíte přístroj vyčistit viz. kapitola „čištění a údržba“. Spotřebič musí být uzemněn pomocí šroubu se značkou uzemnění.

- Vidlici napájecího přívodu nezasunujte do el. zásuvky a nevytahujte z el. zásuvky mokřima rukama a taháním za napájecí přívod!
- Nepoužívejte prodlužovací kabely nebo sdružené zásuvky.
- **Přípojný bod sítě musí mít maximálně níže uvedenou impedanci: $Z_{MAX} = 0,042 + j 0,026 \Omega$ pro fázové vodiče a $0,028 + j 0,017 \Omega$ pro nulový vodič.**

7. SAFETY INSTRUCTIONS

Read these instructions carefully. Keep the instructions for installation and use for use at a later date or for the next owner. Try operating the appliance after unpacking it. Do not connect the appliance if it has been damaged during transport. Describe the damage in writing and call customer services otherwise your warranty will expire. The appliance must be installed according to the appended instructions for installation. The appliance is only intended for cooking food. Monitor the appliance during operation. Only use it in enclosed areas. Do not place any covers on the hotplates, these could cause injury due to overheating, combustion or cracking for example. Do not use any inappropriate protective equipment or child-proof gratings, these could cause injury. This appliance is not intended for operation with an independent timer or remote control.

If you are fitted with a pacemaker or other electronic medical equipment, be careful, because you will be located within the machine's induction field after switching the hob on. Ask your doctor or the manufacturer of the medical device whether your device's operation will be disrupted or whether it will not be affected.

Risk of fire!

- Hot oil and fat combusts readily. Never leave hot oil or fat without supervision. If a fire occurs, never try to extinguish it with water. Switch the hob off and smother the flames carefully with a saucepan lid, fire blanket or other similar method.
- The hotplates are very hot. Never place any flammable items on the cook top. Do not store any items on the cook top.
- The appliance is hot. Never keep flammable items or sprays on the cook top itself.

Risk of burns!

- The hotplates and their surrounding area, particularly potential frames, are hot. Never touch the hotplates. Do not let children close to the appliance.
- If the hotplate radiates heat, but the display does not work, switch the fuses off. Call customer services.
- Metal items on the cook top heat up very quickly. Never place metal items, such as knives, forks, spoons and saucepan lids, on the cook top.
- Switch the hotplate off using the main switch after every use. Do not wait for the cook top to switch off automatically, because there is no cookware on it.
- Risk of electric shock! Unauthorised repairs are dangerous. Repairs may only be carried out or damaged wires replaced by a customer service technician trained by us. If the appliance malfunctions, remove the plug from the socket or switch the circuit breaker. Call customer services.
- If moisture enters the appliance, this may cause injury by electric shock. Do not use high-pressure cleaners or steam cleaners.
- Malfunctions of the appliance may cause injury by electric shock. Never switch a malfunctioning appliance on. Remove the plug from the socket or switch the circuit breaker. Call customer services.
- Cracks or fissures in the glass ceramic surface may cause injury by electric shock. Switch the circuit breaker. Call customer services.

Risk of damage!

- The cook top is fitted with a ventilator beneath it. Adhere to the instructions for installation of the appliance in relation to air supply.

Warning!

- The rough bottoms of pots and pans will scratch the cook top.
- Never place empty cooking ware on the cook top. This could cause damage.
- Do not place hot pots or pans on the control panel, display or hotplate frames. This could cause damage.
- Damage could be caused by hard or pointed items falling on the cook top, display or hotplate frames.
- Aluminium foil and plastic containers will melt on the hot hotplates. We do not recommend using protective foil in the oven.

8. SAFETY INSTRUCTIONS

General warning symbol

There is a risk of danger (injury) if the safety regulations are not adhered to.



This symbol warns against dangerous voltage. (image 5036 IEC 60417-1)



This symbol warns against non-ionising electro-magnetic radiation (image 5140 IEC 60417-1)

Warning

Minor injuries or damages may be caused if the appliance is used in conflict with its purpose, or during unauthorised manipulation.

The warning symbols found on the appliance itself must be adhered to and must be kept legible.

Warning

Before using or maintaining the appliance you must read the instructions for use.

Risks arising from failure to adhere to the safety regulations

Failure to adhere to the safety regulations may endanger the safety of people, the surrounding area and the appliance itself. You are not entitled to compensation of damages in the event of failure to adhere to the safety regulations.

Failure to adhere to the safety regulations may specifically cause the following hazards

(Examples):

- Risk of electric shock
- Risk to people from hot cookware
- Risk to people from hot hotplates (glass ceramic)

Safe use

The safety regulations contained in these instructions for use, valid national regulations for working with electric appliances and for preventing injury and the in-house work and safety regulations, must be adhered to.

- **Warning!** The cookware you cook in may only be placed on the hotplate so that its bottom does not overlap the perimeter of the hotplate. No hot pots or pans may be placed on the control panel, display or frame. Failure to follow this instruction may result in damage to the cookware and appliance.
- What will happen: the cookware will melt, or fuse together, the material in the gap between the appliance and the work surface will burn away due to the heat from the pots, which will ruin the seal and moisture and grease will begin to enter the appliance, which may lead to its malfunction, malfunctions of the display and control panel.
- If the glass ceramic surface is cracked or broken, the hob must be switched off and disconnected from the power supply. Do not touch any parts inside the induction hob.
- The glass ceramic surface heats up when cookware is placed on it. In order to prevent injury (burns),

do not touch the glass ceramic surface.

- Please monitor hot food and fluids.
- **WARNING:** we point out that the floor in the area surrounding the appliance may be slippery. This may cause injury.
- In order to prevent the cookware overheating by heating it when empty, do not heat it without supervision or without containing foodstuffs.
- Switch the hotplate off if you remove the cookware. This means you will avoid the hotplate automatically switching on as soon as you place cookware on it again. You will avoid the cookware from heating up without supervision. If someone wants to use the hob, he/she will have to switch it on again by turning the regulator to “on”.
- Do not use the hotplates as a storage area!
- Do not place any paper, cardboard, fabric, etc. between the cookware and glass-ceramic surface, this could cause a fire. Aluminiumfoil and plastic containers must not be placed on hot surfaces.
- You must realise that various items worn by the user, such as rings, watches etc. may heat up significantly if near the cook top.
- The hotplate must be switched off using the switch after use – do not rely on the cookware recognition system.
- Do not place credit cards, telephone cards, cassettes or other items sensitive to magnetic fields, on the glass-ceramic surface.
- Only the recommended types and sizes of cookware may be used.
- Induction hobs have an internal cooling system. Make sure that the air supply and off take vents remain unrestricted (by fabric for example), do not cover them. This could cause the appliance to overheat and switch off.
- Prevent fluids from entering the hob and water or other fluids from boiling over the edge of cookware. Do not clean the hob using a jet of water.

Unauthorised manipulation and use in conflict with the purpose of the appliance

Correct and reliable functioning of the appliance will only be assured if it is used correctly. Limit values given in the appliance's technical data must not be exceeded or reduced under any circumstances.

Modification / Use of spare parts

Contact the manufacturer if you need to make any modifications to the appliance. In order to guarantee your safety use only the original spare parts or accessories approved by the manufacturer. The warranty expires if you use non-original components. During disassembly, testing and repairs you must make sure the appliance is in a stable position.

Warning! When replacing spare parts, the induction cooker must be “visibly disconnected” from the power supply.

9. RECOGNITION OF COOKWARE

Containers with a diameter of less than 12 cm will not be recognised. The LED pilot light will light up during operation or the digital display shows the chosen power setting (1-9). No power setting will be shown if the appliance is operated without cookware or if the container was not recognised or if it is made from unsuitable material. The pilot light will flash briefly or the display will show a message stating that no cookware was recognised. See error messages.

Monitoring of the heating zone

The heating zone is monitored by a temperature sensor placed beneath the glass ceramic surface (the

middle of the hotplate). Overheated cookware (hot oil, empty pans) are recognised and the current supply is interrupted. The cooker renews the current supply to the cookware only when the temperature falls to normal values.

Warning! Only the hob is protected against overheating, not the cookware. An overheated container is only recognised when the glass ceramic surface reaches a temperature during which the appliance is switched off (260 °C).

Causes of noise

The cooling ventilators can be heard, they switch off and on when the appliance is being operated.

GENERAL INSTRUCTIONS

These instructions for use contain basic information, which must be taken into consideration during installation, use and maintenance. The installer and user must read the instructions for use completely before installing the appliance and putting it into use and these instructions must be stored near the hob so that they are available for viewing at any time.

Use

The induction hob is intended for cooking food. It may be used to boil, heat, flambé, grill, etc. Warning: only containers made from induction material may be used on the induction hob. Only materials we recommend and which are suitable for professional use may be used for making the cookware. The whole bottom of the container must be magnetic. If in doubt try testing the cookware with a magnet.

10. CONDITION FOR INSTALLATION

The induction hob must be installed into a level surface using the installation frame. The air supply and offtake vents must not be covered. The surface into which the cooker is to be installed must be capable of supporting at least 100 kg. The fixtures for disconnecting the appliance from the mains must be easily accessible.

Installation regulations for the built-in model

The following points must be adhered to:

- make sure that the voltage in the mains corresponds to the data given on the appliance type sticker.
- Installation must comply with local regulations about electrical installation in buildings. The valid national regulations about electrical appliances must be adhered to.
- The induction hob is fitted with a supply cable, which may be connected using a plug inserted into a socket.
- If a safety switch is used, it must be calibrated for short-circuits to at least $I_{\Delta n} = 30 \text{ mA}$.
- Prevent blockage of the air supply and offtake vents by items (fabric, wall, etc.)
- Prevent hot air from being drawn into the appliance from the area surrounding the induction hob (multiple appliances next to each other, near the grill or oven). Otherwise an air-supply channel must be used.
- The cooker has a filter, which cleans the air drawn into the appliance. In spite of this you must make sure that the surrounding air drawn in to the induction appliance does not include greasy vapour coming from work activities on other appliances (fryers, grills, etc.).
- The temperature of the drawn in air must be less than +35 °C.
- The users must make sure that all installation, maintenance and inspection work is carried out by the

authorised professional personnel.

- The intake air must be drawn into the channel and through the filter, which is part of the delivery, directly to the ventilator. The cross section of the intake vent must be at least 200 cm² per electronic unit.
- No closed air circulation may occur. The air leaving the hob must never be drawn into the appliance again, otherwise the hob continues to heat up.
- Installation of the appliance must be tested for reliability in practice. In order to do this you must establish the maximum temperature of the cooling radiator. This is measured on the radiator panel below the induction spiral. The temperature must not exceed 65 °C during extended operation (at least 2 hours) and an ambient temperature of 20 °C.
- The supply cable must be shielded with clean contacts on both ends.
- Equipment used to disconnect the cooker from the mains should be switched on and off a maximum of 5 times a day.
- Before performing maintenance or replacement of components, the appliance must be disconnected from the power supply. If this is executed by removing the plug from the socket this must clearly be pointed out and there must be easy access to the socket from all sides so that users can check that the plug is still out of the socket from any position they have access. If this is not possible due to the design of the appliance or due to the method of installation, disconnection must be secured by attaching the removed plug so that it cannot be reinserted by mistake.

The induction hobs are equipped with a cable with plug, which meets national regulations.

Make sure that the plug is correctly attached to the cable:

The legal regulations of the specific country must be adhered to when connecting the appliance to the mains!

Warning

Incorrect voltage may damage the induction hob

Warning

The appliance must be connected by an expert

11. PUTTING THE APPLIANCE INTO OPERATION

Installation

The induction hob is fitted with a supply cable. It must be connected to a socket or to a box in the wall. Only authorised specialist companies may perform electrical installation and specific national and local regulations must be adhered to while doing so. The company performing installation is responsible for correctly connecting and installing the appliance in compliance with the safety regulations. Warning and type labels must be explicitly respected.



Make sure that the mains voltage complies with the voltage given on the appliance type label.

When situating or installing the cooker right next to a wall, partition, kitchen furniture, decorative paneling etc. it is recommended that these be made from inflammable materials, otherwise they should be protected by a layer of appropriate inflammable heat insulating material. Fire regulations must be strictly adhered to!

The induction hob must be installed into a clean and level surface (table, kitchen unit, etc.) in its final location. It must be installed so that it cannot be moved. The “Conditions for installation” must be adhered to.

Remove all items from the heating zone. Make sure that the heating zone is not cracked or broken. Immediately stop operating the appliance if the glass ceramic panel is cracked or broken and immediately switch the appliance off and remove the plug from the socket.

Before you connect the cooker to the mains, turn the power regulator to the “off” (0) position.

12. OPERATION TEST

Warning

Hot pans transfer heat to the heating zone. In order to avoid injury do not touch the heating zone.

Use a pan suitable for use with induction, with a diameter of at least 12 cm.

In order to test the appliance’s function you must first of all switch it on and then proceed as described.

Place a pan in the middle of the heating zone and pour some water into it.

- With LED Turn the power regulator to “on” (a position between Min and Max). The green LED bulb will flash (power level 10% - 30%) or light up continuously (power level 30% - 100%), the water will heat up.
- With a digital display (1-9) Turn the power regulator to “on” (a position between Min and Max). The Display will show the chosen power setting between 1-9.
- With LED When you remove the pan from the heating zone, the green LED must flash (seeking cookware).
- Replace the pan back on the heating zone; the bulb will light up again and start heating the water.
- Turn the power regulator to position “0”. The appliance will stop heating the pan and the bulb will switch off.
- A lit bulb means that energy is being transferred to the pan.
- With digital display (1-9) When you remove the pan from the heating zone, the display must show the symbol indicating that it is seeking cookware – see Error messages.
- Replace the pan back on the heating zone; the display should show the chosen power setting and the appliance will start heating again.
- Turn the power regulator to position “0”. The appliance will stop heating and the display will switch off.
- A number on the display shows that energy is being transferred to the pan.

If the bulb or digital display remain off or flash only briefly, try the following options:

- Is the appliance connected to the mains or is the main switch off?
- Is the power regulator set to the “on” position?
- Are you using a pan suitable for induction (try a magnet on it), with a diameter of at least 12 cm?
- Is the pan placed in the middle of the heating zone (with the exception of appliances with x-y spirals)?

In order to establish whether the material the pan is made from is suitable for induction appliances, use a magnet, which must remain attached to the bottom of the pan. If this does not happen, your pan is not suitable for induction appliances.

Use a pan suitable for induction.

If the appliance still does not function, view the Malfunctions/repairing malfunctions item.

13. OPERATION

Cooking process

The cooker is immediately capable of operation. A lit or flashing bulb shows that energy is being transferred to the pan. Choose the setting by turning the power regulation button. Induction transfer of power depends on the position of the potentiometer.

Position MIN	>	minimum power
Position MAX	>	maximum power

Due to the following circumstances the cook must be more attentive than when cooking using ordinary systems. As soon as you change the power setting by turning the regulator button, the food being cooked immediately responds. Empty pans and pots quickly heat up. NEVER place empty containers on the glass ceramic surface. Put liquid or fat in them first and then start cooking. Set the power setting using the rotating button so that it precisely corresponds to the required cooking method. The container must always be placed in the middle of the heating zone (apart from appliances with a surface wide sensor), otherwise the bottom of the container will not be heated uniformly. When heating oil or fat regularly check the container to prevent it from overheating and the oil or fat combusting.

Warning! The cookware you cook with may only be placed on the hotplate so that the bottom does not overlap its perimeter. Hot pans or pots must not be placed on the control panel, display or frame. Failure to adhere to this instruction will cause damage to the cookware and the appliance. What will happen: the cookware will melt, or fuse together, the material in the gaps between the appliance and the work surface will be burned away by the heat from the cookware and destroy the seal and moisture and grease will enter the appliance, which may lead to malfunction of the appliance., malfunctions of the display and control panel.

Convenience

The induction cooker transfers energy only if a container is located in the heating zone. The position the power regulator is set too has no effect on this. When you remove a pan from the heating zone, transfer of energy is immediately interrupted. When you replace the pan, the chosen power setting is transferred to the pan again. If you switch the appliance off by turning the regulator, you will stop the cooking process. However, the cooker remains ready for use (Standby), the power supply is only switched off when you remove the plug from the socket or switch the main switch off.

Software version

Starting the generator

seconds	explanation
1	8. (segment test)
2	F or P (operating Frequency or Pulses)
3	2. (First software version)
4	1 (Second software version)
5	9 (Third software version)

Normal operation

In the standby regime (the potentiometer switched off) the decimal point flashes every two seconds. When the potentiometer is switched on, the appliance initially seeks out cookware: the symbol U and the decimal point mean that the appliance is looking for cookware (after 1 minute it goes into savings mode and sends out search impulses every 5 seconds).

When a pot is recognised, the display shows the power setting 1-9.

Significance of the decimal point:

lit up = operation

1 s pulse = restriction due to the excessively high temperature of the cooling radiator

½ s pulse = restriction due to the excessively high temperature of the spirals/cookware

¼ s pulse = restriction of power

1/10 s pulse = restriction of power during non-optimal cookware material

14. INSTRUCTIONS FOR USE

Switching on the hotplates

- Before connecting to the electrical network, it is necessary to place all control knobs in the „0“ position..

At the start of operation, turn on the main switch of the device located outside the device. During operation, control the device only with the control knobs. In the case of prolonged downtime, turn off the main switch of the device.

We set the desired power with the control knob (A) of the desired hotplate. The indicator light (B) lights up, which indicates that the hotplate is under electric current. Turn off the hotplate by turning the control knob to the „0“ position.

When the light is on, it flashes, thus signaling that the hotplate is switched on. The light stays on after placing the cooking vessel on the hob. A steady light indicates that energy is being transferred to the cooking pot.



ATTENTION!

- ALWAYS PLACE COOKWARE IN THE CENTER OF THE HOB
- COOKING VESSELS MUST NOT EXCEED THE OUTLINE OF THE GLASS WORK SURFACE
- THE COOKING DEVICE ONLY WORKS WITH UTENSILS INTENDED FOR INDUCTION HEATING
- NEVER PUT EMPTY COOKWARE ON THE HOB
- THE DEVICE ONLY RESPONDS TO CONTAINERS WITH A MINIMUM DIAMETER OF 12 CM.

TERMINATING OPERATION

If you are not using the induction hob, make sure that the main switch or power regulator has not been switched on by mistake. If you are not using the hob for an extended period (several days) remove the plug from the socket and switch the main switch off. Prevent any fluid from entering the hob, do not clean it

using fluids.

15. ČIŠTĚNÍ A ÚDRŽBA

Doporučuje se nechat přístroj alespoň jednou ročně překontrolovat odborným servisem. Veškeré zásahy do přístroje může provádět pouze kvalifikovaná osoba, která má k takovýmto úkonům oprávnění. **POZOR!** Zařízení se nesmí čistit přímou nebo tlakovou vodou. Čistěte zařízení denně. Denní údržba prodlužuje životnost a účinnost zařízení. Vždy vypněte hlavní přívod k zařízení. Nerezové části omyjte vlhkým hadrem se saponátem bez hrubých částic a vytřete do sucha. Nepoužívejte abrasivní nebo korozivní čisticí prostředky. Pozor! Nežli začnete přístroj používat, je nutné z celého povrchu sejmout ochranné fólie, a pak jej dobře omýt vodou se saponátem na nádobí, a poté otřít vlhkým hadrem. **UPOZORNĚNÍ** Záruka se nevztahuje na všechny spotřební díly podléhající běžnému opotřebení (gumová těsnění, žárovky, skleněné a plastové díly atd.). Záruka se též nevztahuje na zařízení pokud není provedena instalace v souladu s návodem – oprávněným pracovníkem dle odpovídajících norem a pokud bylo se zařízením neodborně manipulováno (zásahy do vnitřního zařízení atd.) nebo bylo obsluhováno nezaškoleným personálem a v rozporu s návodem k použití, dále se záruka nevztahuje na poškození přírodními vlivy či jiným vnějším zásahem. **Nutná kontrola servisní organizací 2 x ročně. Převážné obaly a zařízení po ukončení životnosti odevzdejte do sběru, dle předpisů o nakládání s odpadem a nebezpečným odpadem.**