



# Instruction manual



2025-11-25

**Ice maker granular ice 94 air cooling 94  
kg/24h  
IMD 9420 A**

[www.rmgaastro.com](http://www.rmgaastro.com)



# OBSAH

|                                                          |          |
|----------------------------------------------------------|----------|
| <b>1. DECLARATION OF CONFORMITY</b>                      | <b>3</b> |
| <b>2. TECHNICAL DATA</b>                                 | <b>3</b> |
| <b>3. LOCATION ELECTRIC</b>                              | <b>3</b> |
| <b>4. SAFETY MEASURES FOR FIRE PROTECTION</b>            | <b>3</b> |
| <b>5. INSTALLATION</b>                                   | <b>4</b> |
| <b>6. WATER CONNECTION</b>                               | <b>4</b> |
| <b>7. CONNECTING THE ELECTRICAL CABLE TO THE NETWORK</b> | <b>4</b> |
| <b>8. INSTRUCTIONS FOR USE</b>                           | <b>7</b> |
| <b>9. CLEANING AND MAINTENANCE</b>                       | <b>9</b> |

## 1. DECLARATION OF CONFORMITY

Decree of the Ministry of Health of the Czech Republic no. 38/2001 Coll. of 19 January 2001 Regulation (EC) No 1907/2006 - Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) Regulation of the European Parliament and Council Regulation (EC) no. 1935/2004 of 27 October 2004

The products meet the requirements of §26 of Act No.258/2000 as amended. The products meet the requirements of RoHS Directive 2015/863/EU, 10/2011, 517/2014, 2015/1094, 2015/1095.

Attention, the manufacturer gives up any responsibility in case of direct and indirect damage that is related to poor installation, incorrect intervention or adjustments, insufficient maintenance, incorrect use and which are eventually caused by other causes than the points referred to in the conditions of sale. This appliance is intended only for professional use and must be operated by qualified persons. Parts that have been secured by the manufacturer or authorized worker after the setting rebuild.

## 2. TECHNICAL DATA

The label with technical data is located on the side or back panel of the device. Please read the wiring diagram and all the following information in the attached manual before installation.

| Net Width [mm] | Net Depth [mm] | Net Height [mm] | Net Weight [kg] | Power electric [kW] | Loading            |
|----------------|----------------|-----------------|-----------------|---------------------|--------------------|
| 465            | 889            | 889             | 58.00           | 0.470               | 230 V / 1N - 50 Hz |

## 3. LOCATION ELECTRIC

For the correct operation and placement of the appliance, it is necessary to observe the following all prescribed standards for the given market. Unpack the device and check that the device has not been damaged during transport. Place the device on a horizontal surface (maximum unevenness up to 2°). Small unevenness can be leveled with adjustable feet. If the device will be placed in such a way that it will be in contact with the walls of the furniture, these must withstand a temperature of up to 60°C. Installation, adjustment, commissioning must be performed by a qualified person who is authorized to perform such operations, according to applicable standards. The device can be installed separately or in series with devices of our production. A minimum distance of 10 cm from flammable materials must be observed. In this case, it is necessary to secure the appropriate modifications to ensure the thermal insulation of the combustible parts. The appliance must only be installed on a non-flammable surface or against a non-flammable wall. **Parts of the appliance provided by the manufacturer. or his representative, the worker performing the installation may not rebuild the product.**

## 4. SAFETY MEASURES FOR FIRE PROTECTION

- the appliance may only be operated by adults
- the appliance may be used safely in accordance with applicable market standards:

Fire protection in spaces with special risk or danger

Protection against the effects of heat

- the appliance must be placed so that it stands or hangs firmly on a non-combustible surface

Objects of flammable substances must not be placed on the appliance at a distance less than a safe distance from it (the smallest distance between the appliance and flammable substances is 10 cm).

Table: degree of flammability of building materials included in st. flammability of substances and products

| Degree of flammability    | Building materials                                          |
|---------------------------|-------------------------------------------------------------|
| A - non-flammable         | granite, sandstone, concrete, brick, ceramic tiles, plaster |
| B - Not easily flammable  | Acumin, Heraclitus, Lihnos, Itaver                          |
| C1 - highly flammable     | wood, hardwood, plywood, hard paper, umakart                |
| C2 - moderately flammable | chipboards, solodur, cork boards, rubber, flooring          |
| C3 - Highly flammable     | wood fiber boards, polystyrene, polyurethane, PVC           |

- information on the degree of flammability of common building materials is given in the table above. Appliances must be installed in a safe manner. During installation, the relevant design, safety and hygiene regulations must also be respected:
- fire safety of local appliances and heat sources
- fire protection in areas with special risk or danger
- protection against the effects of heat

## 5. INSTALLATION

**Important:** The manufacturer does not provide any warranty for defects arising as a result of incorrect use, failure to follow the instructions contained in the attached user manual and mishandling of appliances. Installation, modification and repair of appliances for large kitchens, as well as their dismantling due to possible damage to the gas supply, can only be carried out on the basis of a maintenance contract, this contract can be concluded with an authorized dealer, while technical regulations and standards and regulations must be observed regarding installation, electrical supply, gas connection and work safety. Technical instructions for installation and adjustment, for use by specialized technicians ONLY. The instructions that follow refer to a technician qualified for installation to carry out all operations in the most correct manner and according to the applicable standards. Any activity related to regulation etc. must only be performed with the device disconnected from the network. If it is necessary to keep the appliance under voltage, the utmost care must be taken. The type of appliance for extraction is declared on the nameplate, it is an A1 appliance.

## 6. WATER CONNECTION

Water connection is done using G1/2 threaded hoses. The water supply must be fitted with separate closures that are freely accessible and within reach of the device. The device includes return valves. The water for filling the duplicator space must be softened - a maximum of 5 ° the French scale of water hardness. The water pressure must be in the range of 50-300 kPa.

## 7. CONNECTING THE ELECTRICAL CABLE TO THE NETWORK

Installation of the electrical supply - this supply must be separately secured. Ato with the corresponding circuit breaker of rated current depending on the power input of the installed device. Check the power consumption of the device on the production label on the back panel (or side) of the device. The connected ground wire must be longer than the other wires. Connect the device directly to the network, it is necessary to insert a switch between the device and the device with a minimum distance of 3 mm between the individual contacts, which corresponds to the applicable standards and load. The earth supply (yellow-green) must not be interrupted by this switch. Connect the device to the mains if the socket has adequate protection. In any case, the supply cable must be located so that it does not reach a temperature of 50 degrees higher than the environment at any point. Before the appliance is connected to the network, it is necessary to first make sure that:

- the supply circuit breaker and the internal distribution can withstand the current load of the appliance (see matrix label)
- the distribution board is equipped with effective grounding according to the standards of the relevant market and the conditions given by law
- the socket or switch in the supply is easily accessible from the appliance
- the electrical supply to the device must be made of oil-resistant material


**We disclaim any responsibility in the event that these standards are not respected and in the event of a violation of the above principles. Before first use, you must clean the device, see chapter "cleaning and maintenance". The appliance must be grounded using a screw with a grounding mark.**

- Do not insert the plug of the power supply into the electrical outlet. sockets and do not pull out the zel. sockets with wet hands and pulling on the power cord!
- Do not use extension cords or multiple sockets.

- **The mains connection point must have a maximum of the following impedance:  $Z_{MAX} = 0.042 + j 0.026 \Omega$  for the phase conductors and  $0.028 + j 0.017 \Omega$  for the neutral conductor.**



Air outlets/refurbishment must be provided in the area between the rear of the machine and the wall.

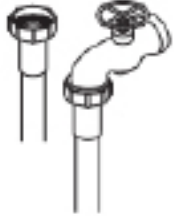

#### WATER AND WATER RUNOFF

Water quality significantly influences the quality, hardness and taste of the ice, and in the case of water condensers it influences the longevity of the condenser.

## CONNECTION TO THE WATER NETWORK


Use the flexible connection (length 1.3 m.) with the two filter seals supplied with the device. Secure the necessary devices according to regulations or applicable standards to prevent water from returning to the mains. The pressure must be between 0.1 MPa and 0.6 MPa (1 to 6 BAR).

If the pressure exceeds these values, install the necessary corrective elements.

### CONNECTION TO THE WATER DRAIN

The drain must be lower than the device, at least 150 mm.

The drain pipe should have an internal diameter of 30 mm with a minimum slope of 3 cm per metre (see picture).

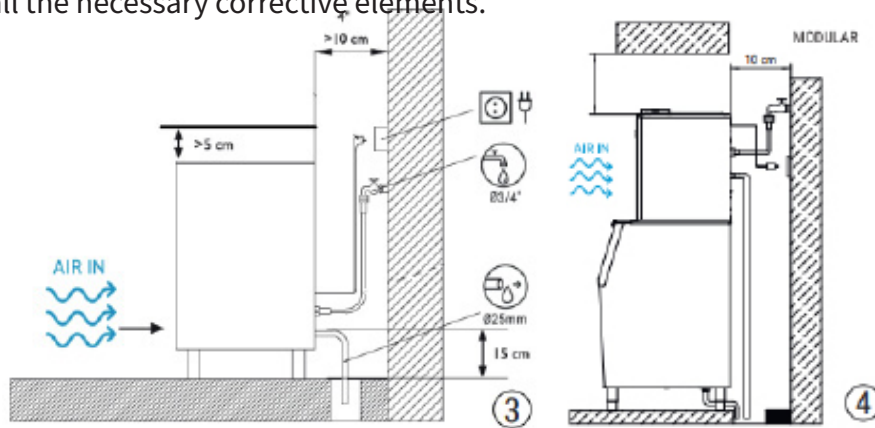

## ELECTRICAL CONNECTION

### THIS DEVICE MUST BE CONNECTED TO A GROUNDED PLUG

In order to prevent possible electrical shock to persons or damage to equipment, earthing is required according to the standards of regional or national legislation.

THE MANUFACTURER IS NOT RESPONSIBLE FOR DAMAGE CAUSED BY FAILURE TO GROUND THE INSTALLATION.

#### Warning:

- The location of the equipment must ensure that the electrical supply is not damaged, even partially.
- Do not install portable power outlets or other power supplies in the rear of the unit.

The device comes with a 1.5m cable. If the power cable is damaged it must be replaced with a special cable or total provided by the manufacturer or warranty service.

The replacement must be carried out by qualified technical personnel.

The device shall be positioned so that there is a minimum space between the rear of the device and the wall to allow convenient and risk-free access to the cable plug.

Fix the corresponding socket.

It is appropriate to install the switch and the relevant electrical safety features in accordance with regional or national regulations.

Voltage and intensity are indicated on the type plate and technical data sheet of this manual. Changes in voltages greater than 10% above the voltages listed on the type plate may cause malfunctions or prevent the equipment from being connected.

### INSTALLATION OF MODULAR EQUIPMENT ON TANKS OR CONTAINERS

Modular generators must be installed on tanks or storage tanks as directed in this manual.

It is necessary to check the strength and stability of the container-machine assembly as well as the attachment of its parts.

### DISPERSION CONE ASSEMBLY (MODULAR MODELS)

This accessory distributes the ice into silos and prevents it from clumping under the outlet pipe.

By changing the position, the ice can be directed in any direction (not included in the machine delivery).

WATER HUNGER

The function of the water level is to maintain the required water flow in the evaporator and, using the built-in magnetic microswitch, to stop the operation of the machine until the water is returned to the tank. The optimum level is indicated by the horizontal line drawn in the figure, and its control is carried out as described in the figure. Push down to raise the level and up to lower it. (Hold only the metal arm, NEVER the buoy)

## 8. INSTRUCTIONS FOR USE

### COMMISSIONING

#### 1. Previous verification

- a) Is the device aligned?
- b) Is the voltage and frequency the same as on the board?
- c) Are the water outlets connected and functional?
- (d) If it is an air condenser device. Is the circulation of the equipment and the room temperature of the site adequate?
- e) Is the water pressure adequate?

| IS THE PRESSURE OF WATER |                 |
|--------------------------|-----------------|
| MAXIMUM                  | 0.6 MPa (6 Bar) |
| MINIMUM                  | 0.1 MPa (1 Bar) |

|         | ROOM TEMPERATURE | WATER       |
|---------|------------------|-------------|
| MAXIMUM | 43°C / 109°F     | 35°C / 95°F |
| MINIMUM | 10°C / 43°F      | 5°C / 35°F  |

NOTE: If the inlet water pressure is more than 0.6 MPa (6 Bar), install a pressure reducer.

#### 2. Commissioning

After reading the installation instructions (ventilation, site conditions, temperatures, water quality, etc.), proceed as follows:

1. On modular models, remove the top cover to access the installation kit (filters, connecting hoses, etc.)
2. On compact models, open the tank door to gain access to the installation kit.
3. Connect the water hose of the machine to the stopcock.
4. Open the tap. Check for any leaks.
5. Connect the machine to the mains and turn on the main switch located on the front.
6. If the connection order is not correct on a three-phase machine, the red light will come on and the order must be changed.
7. Check that nothing on the machine is crackling or vibrating
8. When 10 minutes have elapsed on the timer installed on the electrical panel, the machine will start. (This delay occurs after each machine stop).
9. On modular models (especially three-phase equipment), remove the top cover and check that the motor is turning in the correct direction.

**WARNING:** INSTRUCT THE USER ON MAINTENANCE, NOTING THAT MAINTENANCE AND CLEANING TASKS AND MALFUNCTIONS CAUSED BY NEGLIGENCE ARE NOT COVERED UNDER WARRANTY.

### INSTRUCTIONS AND PROCEDURE FOR CLEANING AND MAINTENANCE

NOTE: Maintenance and cleaning activities and malfunctions caused by negligence are not covered under warranty.

Only if proper maintenance is carried out will the equipment produce and display good ice quality and not malfunction.

Maintenance and cleaning intervals depend on the conditions of the site where the plant is located and the quality of the water.

WARNING: It is essential to carry out at least one revision every 6 months.

In very dusty locations, cleaning of the condenser may be necessary every month.

## MAINTENANCE AND CLEANING PROCESS

WARNING: For all cleaning and maintenance operations, the unit must be de-energized.

### 1. Water condenser

Performed by a qualified technician. Included in the technical manual.

### 2. Air condenser

1) Disconnect the device.

2) Clean the gridded area with a vacuum cleaner equipped with a brush, non-metallic brush or low pressure air.

### 3. Cleaning the tray and exterior

1) Disconnect the appliance, close the water supply and empty the ice cube tray.

2) Use a kitchen cloth with plenty of soap and water.

### 4. External cleaning

Use the same procedure as for the storage tank.

### 5. Cleaning the evaporator

Performed by a qualified technician. Included in the technical manual.

### 6. Cleaning of inlet filters

Usually they are clogged in the first days of operation, ESPECIALLY IN THE CASE OF NEW WATER PLUMBING INSTALLATIONS.

Loosen the hose and clean it under a running tap.

### 7. Water leakage control

Whenever you tamper with the equipment, check all water connections, clamps and hoses to prevent leaks and flooding.

## WATER QUALITY AND WARRANTY

In areas with water hardness outside the range of 15°F to 40°F, the ice maker will need to be protected by installing filters or descaling systems. The manufacturer's warranty does not cover cases where the above protective measures have not been installed when required.

## 9. CLEANING AND MAINTENANCE

It is recommended to have the device checked with a specialist service at least once a year. All the interventions in the device can only be carried out by a qualified person who has the authorization to do so.

**CAUTION!** The device must not be cleaned with direct or pressure water. Clean the equipment daily. Daily maintenance extends the life and efficiency of the equipment. Always turn off the main inlet to the device. Wash the stainless steel parts with a damp cloth with a detergent without coarse particles and wipe dry. Do not use abrasive or corrosive cleaning agents. Attention! Before using the device, it is necessary to remove the protective foil from the entire surface, and then wash it well with water with detergent, and then wipe it with a damp cloth. **ALERT!** The warranty does not apply to all consumables subject to normal wear (rubber seals, bulbs, glass and plastic parts, etc.). The warranty also does not apply to the device if the installation is not carried out in accordance with the instructions - an authorized worker according to the corresponding standards and if the equipment was unprofessionally manipulated (interventions in the internal equipment, etc.) or were operated by unhappy staff and contrary to the instructions for use, further The warranty does not apply to damage by natural effects or other external intervention. **Required service organization 2 times a year. After the lifetime, the shipping packaging and equipment are submitted to the collection, according to the regulations on waste management and hazardous waste.**