



# Instruction manual



2026-04-11

## **Cooking range solid top combined with static electric oven GN 1/1 - 5x burner TPF4-610GEM**

[www.rmgastro.com](http://www.rmgastro.com)



# TABLE OF CONTENTS

<b>1. DECLARATION OF CONFORMITY</b>	<b>3</b>
<b>2. TECHNICAL DATA</b>	<b>3</b>
<b>3. TABLE OF GASES FOR WHICH THE PRODUCT IS INTENDED</b>	<b>3</b>
<b>4. LOCATION ELECTRIC</b>	<b>4</b>
<b>5. LOCATION GAS</b>	<b>4</b>
<b>6. SAFETY MEASURES FOR FIRE PROTECTION</b>	<b>4</b>
<b>7. INSTALLATION</b>	<b>5</b>
<b>8. THERMAL OUTPUT CHECK</b>	<b>5</b>
<b>9. CONNECTING GAS CONNECTION HOSE</b>	<b>5</b>
<b>10. LIQUID GAS CONNECTION</b>	<b>5</b>
<b>11. CONNECTING THE ELECTRICAL CABLE TO THE NETWORK</b>	<b>6</b>
<b>12. CHECK DEVICE SETTINGS FOR GAS TYPE</b>	<b>6</b>
<b>13. INSTRUCTIONS FOR USE</b>	<b>10</b>
<b>14. CLEANING AND MAINTENANCE</b>	<b>14</b>

## 1. DECLARATION OF CONFORMITY

Decree of the Ministry of Health of the Czech Republic no. 38/2001 Coll. of 19 January 2001 Regulation (EC) No 1907/2006 - Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) Regulation of the European Parliament and Council Regulation (EC) no. 1935/2004 of 27 October 2004

The products meet the requirements of §26 of Act No.258/2000 as amended. The products meet the requirements of RoHS Directive 2015/863/EU, 10/2011, 517/2014, 2015/1094, 2015/1095.

Attention, the manufacturer gives up any responsibility in case of direct and indirect damage that is related to poor installation, incorrect intervention or adjustments, insufficient maintenance, incorrect use and which are eventually caused by other causes than the points referred to in the conditions of sale. This appliance is intended only for professional use and must be operated by qualified persons. Parts that have been secured by the manufacturer or authorized worker after the setting rebuild.

## 2. TECHNICAL DATA

The label with technical data is located on the side or back panel of the device. Please read the wiring diagram and all the following information in the attached manual before installation.

Net Width [mm]	Net Depth [mm]	Net Height [mm]	Net Weight [kg]	Power electric [kW]
1000	900	900	155.00	2.620
Loading	Power gas [kW]	Oven Type	Oven size	
230 V / 1N - 50 Hz	23.500	electrical static with grill	640 x 420 x 350	

**The maximum and reduced nominal heat input in kW is related to the Hi of the gas used. If the product is connected to LPG, the gas cylinder must be in sufficiently ventilated rooms.**

## 3. TABLE OF GASES FOR WHICH THE PRODUCT IS INTENDED

Execution	Product Category	Connection overpressures (mbar)	Used gas	Country of destination
A1	I2E	20	G20	DE, NL, PL, RO
A1	I2ELL	20, 20	G20,G25	DE
A1	I2E+	20/25	G20/G25	BE, FR
A1	I2H	20	G20	AT, BG, CH, CZ, DK, HR, EE, ES, FI, GB, GR, IE, IT, LT, LV, NO, PT, RO, SE, SI, SK, TR, LU, CY, FR
A1	I3B/P	30	G30	BG, CY, CZ, DK, GB, HR, EE, FI, FR, GR, HU, IT, LT, LV, MT, NL, NO, RO, SE, SI, SK, TR
A1	I3B/P	50	G30	AT, DE, CZ, CH, FR, SK
A1	I3P	37	G31	BE, CH, CZ, ES, GB, GR, IE, RO, SI, SK, FR, NL, PT, HR, IT, LT, PL, TR
A1	I3+	28-30/37	G30/G31	BE, CH, CY, CZ, EE, ES, FR, GB, GR, IE, IT, LT, PT, SI, SK, TR
A1	II2E3B/P	20, 50	G20, G30	DE, PL, RO
A1	II2ELL3B/P	20, 20, 50	G20, G25, G30	DE
A1	II2E+3+	20/25, 28-30/37	G20/G25, G30/G31	BE, FR
A1	II2H3B/P	20, 30	G20, G30	BG, CZ, GB, DK, HR, EE, FI, GR, IT, LT, LV, NO, RO, SE, SI, SK, TR, CY, FR

Execution	Product Category	Connection overpressures (mbar)	Used gas	Country of destination
A1	I12H3B/P	20, 50	G20, G30	AT, CH, CZ, FR, SK
A1	I12H3P	20, 37	G20, G31	CH, CZ, ES, GB, GR, IE, RO, SI, SK
A1	I12H3+	20, 28-30/37	G20, G30/G31	CH, CY, CZ, EE, ES, GB, GR, IE, IT, LT, PT, SK, SI, TR

#### 4. LOCATION ELECTRIC

For the correct operation and placement of the appliance, it is necessary to observe the following all prescribed standards for the given market. Unpack the device and check that the device has not been damaged during transport. Place the device on a horizontal surface (maximum unevenness up to 2°). Small unevenness can be leveled with adjustable feet. If the device will be placed in such a way that it will be in contact with the walls of the furniture, these must withstand a temperature of up to 60°C. Installation, adjustment, commissioning must be performed by a qualified person who is authorized to perform such operations, according to applicable standards. The device can be installed separately or in series with devices of our production. A minimum distance of 10 cm from flammable materials must be observed. In this case, it is necessary to secure the appropriate modifications to ensure the thermal insulation of the combustible parts. The appliance must only be installed on a non-flammable surface or against a non-flammable wall. **Parts of the appliance provided by the manufacturer. or his representative, the worker performing the installation may not rebuild the product.**

#### 5. LOCATION GAS

For the correct activity and location of the appliance, it is necessary to observe all directives and standards of the country. Expand the device and check that the device has not been damaged during transport. Place the device on the horizontal surface (maximum inequality up to 2 °). Minor inequalities can be balanced with regulated legs. If the device is located in contact with the walls of the furniture, they must withstand temperatures up to 60 ° C. Installation, adjustment, commissioning must be carried out by a qualified person who is authorized for such acts, according to valid standards. The device can be installed separately or in a series with our production devices. It is necessary to follow a minimum distance of 10 cm from flammable materials. In this case, it is necessary to ensure the appropriate adjustments to ensure the thermal insulation of flammable parts. The appliance must only be installed on a non -flammable surface or at a non -flammable wall. **The smallest required air flow from the outdoor space for appliances in design and in the range of 5-20 m3/h, depending on the type of appliance. It depends on the installation regulations for the country of destination. Components of the appliance secured by the manufacturer. Or his representative must not rebuild the worker's installation of the product. The device must be installed in a suitably ventilated environment.**

#### 6. SAFETY MEASURES FOR FIRE PROTECTION

- the appliance may only be operated by adults
- the appliance may be used safely in accordance with applicable market standards:

Fire protection in spaces with special risk or danger

Protection against the effects of heat

- the appliance must be placed so that it stands or hangs firmly on a non-combustible surface

Objects of flammable substances must not be placed on the appliance at a distance less than a safe distance from it (the smallest distance between the appliance and flammable substances is 10 cm).

Table: degree of flammability of building materials included in st. flammability of substances and products

Degree of flammability	Building materials
A - non-flammable	granite, sandstone, concrete, brick, ceramic tiles, plaster

Degree of flammability	Building materials
B - Not easily flammable	Acumin, Heraclitus, Lihnos, Itaver
C1 - highly flammable	wood, hardwood, plywood, hard paper, umakart
C2 - moderately flammable	chipboards, solodur, cork boards, rubber, flooring
C3 - Highly flammable	wood fiber boards, polystyrene, polyurethane, PVC

- information on the degree of flammability of common building materials is given in the table above. Appliances must be installed in a safe manner. During installation, the relevant design, safety and hygiene regulations must also be respected:
- fire safety of local appliances and heat sources
- fire protection in areas with special risk or danger
- protection against the effects of heat

## 7. INSTALLATION

**Important:** The manufacturer does not provide any warranty for defects arising as a result of incorrect use, failure to follow the instructions contained in the attached user manual and mishandling of appliances. Installation, modification and repair of appliances for large kitchens, as well as their dismantling due to possible damage to the gas supply, can only be carried out on the basis of a maintenance contract, this contract can be concluded with an authorized dealer, while technical regulations and standards and regulations must be observed regarding installation, electrical supply, gas connection and work safety. Technical instructions for installation and adjustment, for use by specialized technicians ONLY. The instructions that follow refer to a technician qualified for installation to carry out all operations in the most correct manner and according to the applicable standards. Any activity related to regulation etc. must only be performed with the device disconnected from the network. If it is necessary to keep the appliance under voltage, the utmost care must be taken. The type of appliance for extraction is declared on the nameplate, it is an A1 appliance.

## 8. THERMAL OUTPUT CHECK

Appliances must be checked to verify their thermal power input: The heat output is marked on the label or can be found in this manual. It is necessary to verify first if the appliance is made for the same type of gas to be used and therefore if the label corresponds to the gas type label to be used. To convert to another type of gas, it is necessary to check if the type of gas marked corresponds which is recommended in this manual. The pressure is measured by the pressure gauge of the necessary sensitivity. The pressure gauge is connected to the appropriate location, so it is necessary to unscrew the screw with an airtight cap and connect the pressure gauge. After the measurement, it is necessary to screw the screw back and check its tightness.

## 9. CONNECTING GAS CONNECTION HOSE

The gas must be connected by a tube with a maximum length of 1.5 meters of galvanized steel, copper or flexible steel hose in accordance with the applicable ground standards. Each device must have a closable tap at the inlet to easily stop the gas supply. After installing the device, we must check any gas leaks. Never check the leaks with an open fire. Materials that do not cause corrosion, for example, a soap water solution, must be used to check gas leakage. The devices underwent a thorough inspection of the manufacturer, the data on the type of gas, pressure and type of the device are listed on the label with characteristics. LPG bottles must be equipped with a controller that corresponds to the gas pressure on the equipment label in accordance with the applicable country's legislation.

## 10. LIQUID GAS CONNECTION

Connecting the appliance to the gas distribution system must be made by a steel or copper hose suitable for valid national requirements. This must be checked regularly and replaced as needed. Each appliance must be equipped with a closing tap and a quick slip. The quick slip must be freely accessible and within

range of the device. After the installation, it is necessary to check that there is no gas leakage. To determine leaks we use soapy water or detection sprays to determine possible leaks. Do not use corrosion-causing substances! All our appliances are carefully inspected. The type of gas, pressure and designation of the relevant category are listed on the production label. Connection to liquid gas: The pressure for liquid gas connection must be 28 or 30 mbar for propane/butane and 37 mbar for propane. It is necessary to check the label, measure the pressure and check the parameters of the installed nozzles with the required nozzle parameters according to the manufacturer's requirements. If the pressure is less than 25 mbar or greater than 37 mbar must not be connected to the appliance. Natural gas connection: The pressure when connecting to methane must be 18 or 20 mbar. It is necessary to check the label, measure the pressure and check the parameters of the installed nozzles with the required nozzle parameters according to the manufacturer's requirements. If the pressure is less than 15 mbar or higher than 22.5 mbar must not be connected to the appliance.

## 11. CONNECTING THE ELECTRICAL CABLE TO THE NETWORK

Installation of the electrical supply - this supply must be separately secured. Ato with the corresponding circuit breaker of rated current depending on the power input of the installed device. Check the power consumption of the device on the production label on the back panel (or side) of the device. The connected ground wire must be longer than the other wires. Connect the device directly to the network, it is necessary to insert a switch between the device and the device with a minimum distance of 3 mm between the individual contacts, which corresponds to the applicable standards and load. The earth supply (yellow-green) must not be interrupted by this switch. Connect the device to the mains if the socket has adequate protection. In any case, the supply cable must be located so that it does not reach a temperature of 50 degrees higher than the environment at any point. Before the appliance is connected to the network, it is necessary to first make sure that:

- the supply circuit breaker and the internal distribution can withstand the current load of the appliance (see matrix label)
- the distribution board is equipped with effective grounding according to the standards of the relevant market and the conditions given by law
- the socket or switch in the supply is easily accessible from the appliance
- the electrical supply to the device must be made of oil-resistant material

**We disclaim any responsibility in the event that these standards are not respected and in the event of a violation of the above principles. Before first use, you must clean the device, see chapter "cleaning and maintenance". The appliance must be grounded using a screw with a grounding mark.**

- Do not insert the plug of the power supply into the electrical outlet. sockets and do not pull out the zel. sockets with wet hands and pulling on the power cord!
- Do not use extension cords or multiple sockets.
- **The mains connection point must have a maximum of the following impedance:  $Z_{MAX} = 0.042 + j 0.026 \Omega$  for the phase conductors and  $0.028 + j 0.017 \Omega$  for the neutral conductor.**

## 12. CHECK DEVICE SETTINGS FOR GAS TYPE

Our appliances are certified and regulated for natural gas (see type plate). Conversion or adaptation to a different type of gas must only be carried out by an authorized technician. Nozzles for different types of gas are in a bag packed with the boiler and are marked in hundredths of mm (technical data table).

Mark	Dimension (cm)	Plate dimension cm	Voltage	Power kW	Power kcal/h	Power oven kW	Weight kg	Volume	Number of burners	Oven
TPT - 64 G	40 x 60 x 28	39 x 50	-	5,5	4725	-	50	0,12	-	-

TPF4 - 610 GEM	100 x 60 x 90	-	230 V / 50 Hz	23,5	20187	2,62	115	0,83	2x 3.5 kW; 2x 5.5 kW; 1x 5.5 kW burner (burner)	static GN 1/1
TPF4 - 610 G	100 x 60 x 90	-	230 V / 50 Hz	27,5	23623	0,015	115	0,83	2x 3.5 kW; 2x 5.5 kW; 1x 5.5 kW burner (burner)	with grill GN 1/1

Connecting the power cable to the mains:

Before connecting the appliance to the electrical installation, it is necessary to check that the new or repaired electrical installation has been properly wired by its contractor and that an inspection report has been made on the ability to operate the electrical system safely. We do not recommend connecting the appliance to the mains without this condition being met!

Installation of the electrical supply - The supply cable to the appliance must be separately fused with an appropriate circuit breaker of rated current depending on the power input and type of appliance installed. The recommended circuit breaker rating for the type of appliance is shown in the table of values. Check the rating of the appliance on the rating plate on the rear of the appliance. Connect the appliance directly to the mains, it is essential to insert a switch with a minimum of 3mm distance between the contacts, which corresponds to the applicable standards and loads. Inlet grounding (yellow-green) must not be interrupted by this switch.

The supply cable must be positioned so that at no point does it reach a temperature 50o C above ambient. It must be so routed that it cannot be mechanically damaged during normal operation and maintenance, and be long enough and adequate to allow the appliance to be handled in the event of servicing.

Before connecting the appliance to the mains electricity supply, it is necessary to check whether:

- the supply circuit breaker and the internal wiring can withstand the load of the appliance (see matrix label)
- the distribution is equipped with an effective earthing according to the standards (CSN) and conditions given by law
- the socket or switch in the supply is easily accessible from the appliance

It is recommended to use flexible cables in H07RN-F unless otherwise stated in the installation instructions (THIS is the installation instructions !!) , or a cable approved by the CSN for the type of appliance with regard to its location and nature of operation. The earth wire (yellow-green) must be longer than the other wires and must not be connected to the switch or otherwise interrupted. Cables shall be freely located and shall not interfere with normal operation, shall be sufficiently far from the work surface, and shall be long enough to allow the appliance to be handled in the event of cleaning and servicing. The cable must not come into contact with combustible materials such as carpets, tablecloths, etc., must not be exposed to sharp objects or mechanically stressed. The earth conductor "PE" must be connected to all electrical appliances that have screws or terminals marked "PE". It is recommended to connect a separate 'PE' protective conductor for each appliance.

The recommended supply cable size for the appliance type is given in the table of values. Permanently connected appliances and appliances equipped with a grounding clamp or terminal must be connected to a protective earth conductor. It is recommended to connect a separate current protector to the circuit of each appliance.

After the appliance is connected to the mains, it must be inspected and a revision certificate must be drawn up  
a report on the safe operation of the appliance.

WE DISCLAIM ANY LIABILITY IN THE EVENT THAT THESE ABOVE RULES,  
RECOMMENDATIONS AND RELEVANT APPLICABLE STANDARDS WILL NOT BE RESPECTED

Connecting the gas connection hose

Before connecting the appliance to the gas pipeline, it is necessary to check whether the new or repaired gas pipeline has been properly vented (gassed) by its contractor and whether an inspection report on the safe operation capability of the gas pipeline has been prepared.

We do not recommend connecting the appliance to the gas supply without this condition!

The appliances are built in "A" design with open flue gas exhaust to the room. The room must have sufficient volume and air exchange with respect to the performance of the appliance according to the applicable standards and TPG70401.

It is important to make sure that the appliance is built for the correct type of gas to which it will be connected.

The connection of the appliance to the natural gas supply must be made with a flexible hose complying with the applicable standards and certified for the type of gas used. The supply hose must be routed in such a way as to prevent mechanical or thermal damage during normal operation and maintenance. It must be of adequate length to service the appliance if necessary. The thread size of the gas hose for the type of appliance is given in the table of values. Each inlet to the appliance shall be fitted with a separate stopcock which is easily accessible to the operator. After the installation has been completed, the appliance must be checked for gas leaks.

During the joint leak test, we use a detector, foaming solution or detection spray to detect any gas leaks.

Do not use corrosive substances! All our appliances are carefully inspected. The type of gas, pressure and the relevant category designation are indicated on the rating plate.

Gas type and power control

Appliances must be checked to verify the correct type of gas and their heat output:

The type of gas for which the appliance is built is indicated on the rating plate (in the medium, gas, etc.) and is also marked with a label at the connection point for the gas hose.

G-20 natural gas

G-30/31 propane-butane

If the marking does not correspond to the type of gas to which the appliance is to be connected, the nozzles must be replaced by a gas appliance specialist. It is recommended to order nozzle replacement in advance before purchasing the appliance.

The heat output is indicated on the label and in the table of values for the appliance type in this manual.

The pressure is measured with a pressure gauge of the required sensitivity. The pressure gauge is connected to the appropriate place, so it is necessary to unscrew the screw with the airtight cap and connect the

pressure gauge. When the measurement is complete, the screw must be screwed back in and checked for tightness.

## Converting the appliance to another type of gas

Our appliances are approved and regulated for natural gas or propane-butane (see nameplate).

The appliance must only be rebuilt by an authorised technician. The nozzles for the second type of gas are supplied in the instruction bag and the nozzle bore diameter is stamped directly on the nozzles in hundredths of mm and in the "Technical data" table.

All burner nozzles and pilot burners must always be replaced.

The pilot burner nozzle is located directly in the burner, downstream of the gas supply to the burner. Care must be taken to avoid damaging the associated parts - spark plugs etc. and shearing off the threads of the threaded nut. The nozzle of the main burner is located directly in front of the burner or at the burner inlet. After replacing the nozzle, the flame on the burner must be checked for burning, it must be a crisp blue colour and the air intake must be adjusted.

After converting the appliance to another type of gas, change this information on the appliance label.

Checking the operation of the device:

- check the tightness of the connections
- check the flame on the pilot burner and the intensity of the flame
- check the ignition and flame of the main burner, it must be sharp and blue
- check the flame of the main burner for minimum power (spore)
- test if the thermocouple is sufficiently in the burner flame
- the user is advised to follow the instructions when using the appliance

Liquid gas connection:

The pressure for the liquid gas connection must be 28 or 30 mbar for butane and 37 mbar for propane. It is necessary to check the label, measure the pressure and check the parameters of the installed nozzle with the required nozzle parameters according to the manufacturer's requirements. If the pressure is less than 25 mbar or greater than 37 mbar the consumer MUST NOT be connected.

Connection to natural gas:

The methane connection pressure must be 18 or 20 mbar. It is necessary to check the label, measure the pressure and check the parameters of the installed nozzle with the required nozzle parameters according to the manufacturer's requirements. If the pressure is less than 15 mbar or greater than 22.5 mbar the consumer MUST NOT be connected.

Checking the supply air to the main burners:

The burners usually have an air regulator with a control screw that allows the amount of air to be adjusted. The table "Technical data" gives the indicative values for parameter X (supply air). The adjustment of the supply air quantity must be done in such a way as to avoid "tearing off" the flame when the burner is cold and, on the contrary, the flame is "whipped" back when the burner is heated.

After connecting the appliance to the gas supply, the appliance must be inspected and an inspection re-

port must be drawn up to ensure safe operation.

WE DISCLAIM ANY LIABILITY IF THESE RULES, RECOMMENDATIONS AND APPLICABLE STANDARDS REFERRED ABOVE ARE NOT ENFORCED Commissioning.


Attention! Before using the unit, the protective film of the stainless steel sheet, surface and line must be removed from the entire surface. All food contact surfaces and parts must be washed thoroughly with dish detergent and then wiped clean with clean water.



### 13. INSTRUCTIONS FOR USE


Attention! The appliance must only be used under supervision.

Ignition and adjustment of burners and hotplate.





On the front panel above each knob is a symbol that indicates which burner the knob is assigned to. 

To light the burner, turn the corresponding knob to the left from the "0" position to the  symbol (see picture), keep it pressed and at the same time press the button with the  symbol until the gas ignites.

The button must be pressed for a few seconds and then released. It may happen that the gas does not ignite immediately, in which case repeat the procedure. By turning the knob to the position , the burner is brought to the minimum. To switch off the burner, turn the corresponding knob back to position "0".

Lighting the oven burner and gas control

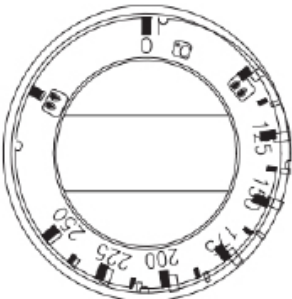

To ignite the oven burner, turn the appropriate knob to the left from the "0" position to any position between  and 250 (see illustration) and hold the knob down until the gas ignites.

You can see if the burner has been lit by looking through the inspection hole at the bottom of the oven.

Release the knob after a few seconds.

If the flame goes out, repeat the procedure.


Then turn the knob to the desired temperature.

To turn the oven off, turn the knob to the right to position 0.

Please note: When the oven is on, the oven door must not be left open as this will heat up and possibly damage the knobs.

Lighting the grill burner


Important: The grill can only be used with the oven door half open.

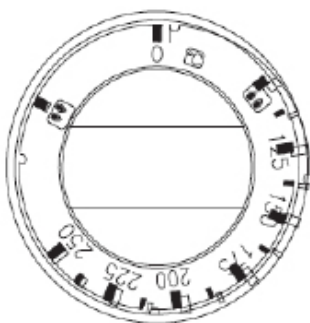

Insert the protective sheet, which is included with the unit, under the control panel to protect the control panel from overheating.

Remove this protective sheet from the device only when it is cool. When the grill is in use, it can reach high temperatures. Always wear protective gloves to protect yourself from burns.




To light the grill, turn the knob to the right from the "0" position to the  position (see picture) and hold the knob down until the gas ignites.

Once the gas is ignited, hold the knob down for 10 seconds to allow the thermocouple to heat up, then release the knob. If the flame goes out, repeat the procedure. To turn the grill burner off, turn the knob back round to position 0.

Note: Gas ovens are equipped with an audible timer that can be set for a maximum of 120 minutes. Turn the knob to the right to the desired value between 0 and 120 minutes (see illustration). An audible signal will sound when the set time has elapsed.


### Switching on and setting up the hot air oven

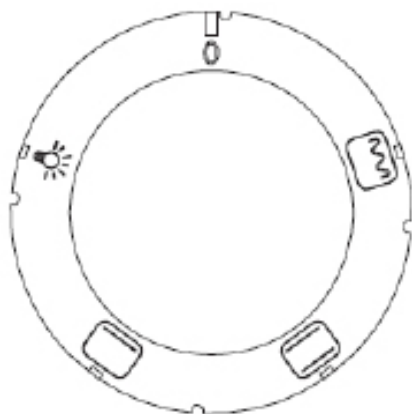


Oven:


Turn the knob to the right to set the desired temperature.

To turn the oven off, turn the knob to the left to position 0.

To use the oven with the upper and lower heating elements, set the knob to the symbol .

If you want to use the oven for bottom heating only, set the knob to the symbol .

Note: When the oven is on, the oven door must be closed, otherwise the knobs and the protective plate could be damaged by the heat.

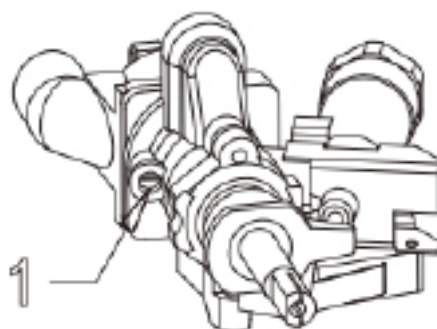

## Grill:

When using the grill, the oven door must remain open.

The protective sheet is supplied with the oven. Secure it under the control panel to prevent heat damage to the knobs (see Figure). Remove the protective sheet only after it has cooled down. The grill reaches high temperatures when grilling, so you must wear protective gloves to protect your hands from burns.

Turn the oven control knob to the symbol 

Switching on and setting up the multifunction oven



## Oven:

The hot air is distributed to all parts of the oven via a fan to ensure an even cooking result. As the whole oven space is heated evenly, different foods can be cooked together on different rungs. Turn the hot air knob to set the desired temperature.

There is no need to preheat the oven, as the hot air heats the room very quickly.

To switch on the oven, turn the knob (see picture) right or left to one of the following position.



upper and lower heating

bottom heating

top heating


grill

grill + fan


upper and lower heater + fan

oven fan

fast defrosting

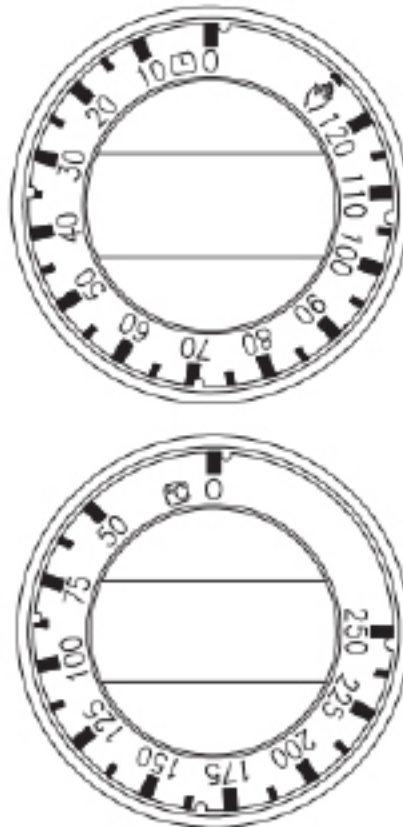

A green light indicates that the oven is powered.

After selecting the type of baking, turn the timer knob (see picture), left to the manual position , or right to the desired value between 0 and 120 min. When the set time has elapsed, an audible signal will sound and the oven will automatically switch off at the same time.


Once the cooking time has been set, turn the thermostat knob (see picture) to the right and set the desired temperature between 50° C and 250° C

Please note: When the oven is on, the oven door must be closed, otherwise the the knobs and the protective plate may have been damaged by the heat.

### Grill:

When using the grill, the oven door must be closed and the thermostat knob must be set to 200 °C.

### Oven lighting

To turn on the light inside the oven, press the button with the  symbol.

With the interior light on, you can check the cooking progress through the glass door without having to open the door.

### Cleaning and maintenance

Before cleaning, disconnect the gas and electricity supply.

Do not clean the device:

- water under pressure
- with a metal brush
- aggressive and corrosive agents and corrosives
- means containing abrasive particles
- with chlorine

The device must be cleaned regularly. Daily maintenance of the equipment prolongs its life and functionality. Stainless steel parts can be cleaned with a damp cloth and detergent, then washed with detergent and wiped dry.

## 14. CLEANING AND MAINTENANCE

It is recommended to have the device checked with a specialist service at least once a year. All the interventions in the device can only be carried out by a qualified person who has the authorization to do so.

**CAUTION!** The device must not be cleaned with direct or pressure water. Clean the equipment daily. Daily maintenance extends the life and efficiency of the equipment. Always turn off the main inlet to the device. Wash the stainless steel parts with a damp cloth with a detergent without coarse particles and wipe dry. Do not use abrasive or corrosive cleaning agents. Attention! Before using the device, it is necessary to remove the protective foil from the entire surface, and then wash it well with water with detergent, and then wipe it with a damp cloth. **ALERT!** The warranty does not apply to all consumables subject to normal wear (rubber seals, bulbs, glass and plastic parts, etc.). The warranty also does not apply to the device if the installation is not carried out in accordance with the instructions - an authorized worker according to the corresponding standards and if the equipment was unprofessionally manipulated (interventions in the internal equipment, etc.) or were operated by unhappy staff and contrary to the instructions for use, further The warranty does not apply to damage by natural effects or other external intervention. **Required service organization 2 times a year. After the lifetime, the shipping packaging and equipment are submitted to the collection, according to the regulations on waste management and hazardous waste.**